


WIRELESS PEEPHOLE VIDEO DOORBELL



USER MANUAL

Please make full charge before use it!

This smart battery Wifi Video Doorbell lets you answer the door from anywhere, whether you're halfway across the world, or just too busy to walk to the door. It lets you see, hear and speak to visitors with ease using your smart phone or tablet.

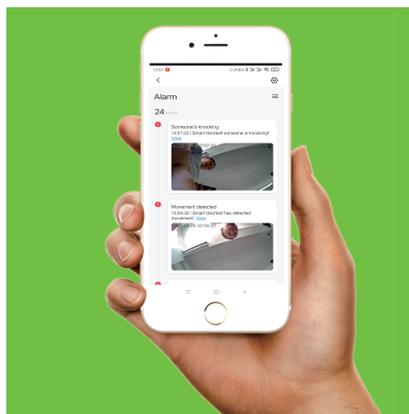


INSTALL APP



NOTE: Search for **Smart Life** on the Google Play/iPhone app stores.

STEP 1 CREATE ACCOUNT


Open the app. Follow the prompts and tap "Sign Up" to create an account. Be sure to allow all permissions requested by the app.

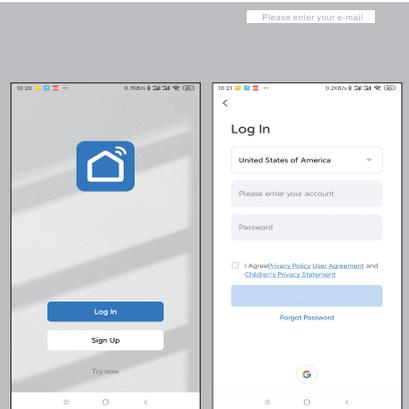

Note: If any security apps have been installed in your phone/tablet that could affect the **Smart Life** app, please be sure to grant it the appropriate permissions. please make sure your phone/tablet is connected to your wifi router (only support 2.4g)

STEP 2 ADD DEVICE

Tap the + to add a new device.

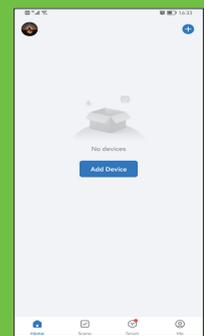


STEP 3

Tap the QR Code to add a new device. **Note:** Make sure your phone/tablet is connected to your wi-fi internet prior to configuring the wi-fi for the machine




STEP 4

Hold down the button of on screen for 5 seconds to initiate wi-fi configuration mode, once you hear the voice prompt, tap "Next." (please make sure the router within 2 meters)

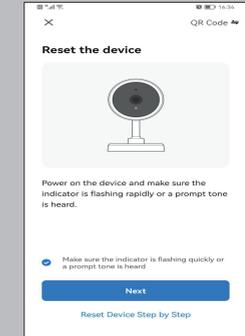

STEP 5

Input your WIFI password for WIFI configuration
TIP: WI-FI SET UP NOT WORKING Try restarting your router.

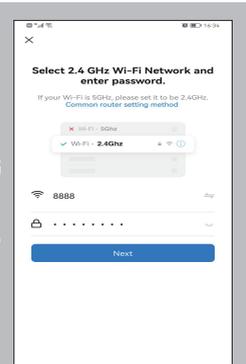

STEP 6

Put your cellphone in front of the device about 10-20cm to facilitate QR scanning.



STEP 7

APP/DEVICE CONNECT

Once the Wi-Fi set up is complete and you hear the voice prompt confirming that the Wi-Fi configuration was successful, tap "COMPLETE"



DONE!

DEVICE INSTALLATION


Simply press the doorbell button to start.



FLIP OVER FOR MORE DETAILS!

AUTOMATICALLY WAKES UP

Tap the picture
Quick access via app
within 3 seconds.

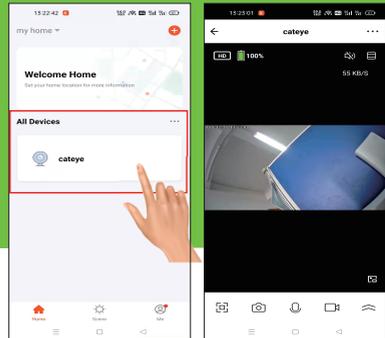

REMOTE VIEWING

NOTIFICATIONS




When the doorbell button is pressed, the app will send the following notifications, depending on the mode it's on.

APP INTERFACE FUNCTIONALITY


- TAP TO TAKE A SNAPSHOT
- TAP AND HOLD DOWN TO TALK
- TAP TO RECORD VIDEO
- BATTERY LIFE
- Quick Settings

PIR SETTINGS

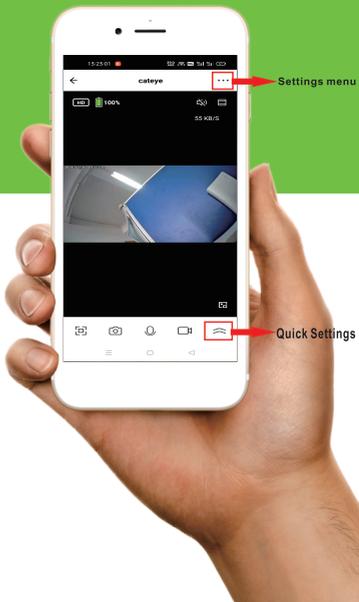


This function can only be enabled AFTER the app has been successfully added to your phone.

When pir alarm(PIR) are turned on, you'll be notified on your phone whenever motion is detected or when theft is attempted.

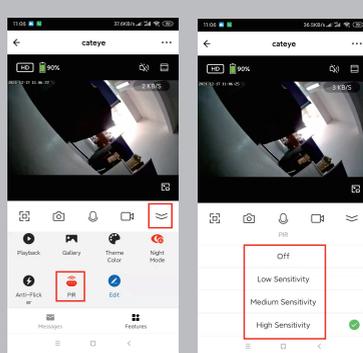

DEVICE APP FUNCTIONS


After installing the app, go into your device's information by tapping on the added device. Here you may review your pictures, videos, change your Wi-Fi settings, share the device or delete the device.

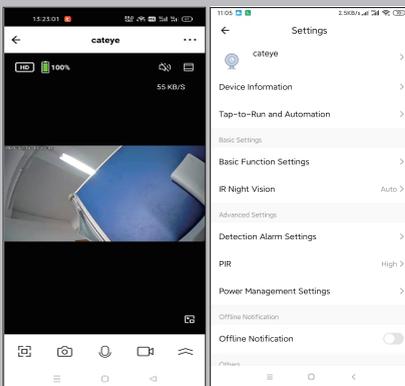

PLAYBACK

Click "Playback" to check the SD card storage record

*The device only support above Class 10 FAT32 TF cards.

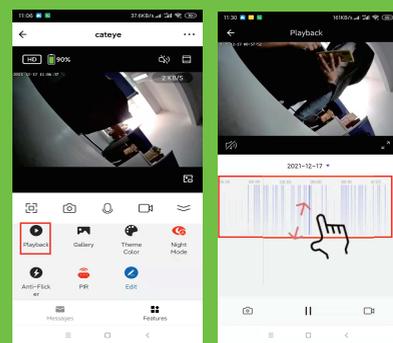


SHARING WITH OTHER PHONES


Shared users: Please download and install the app before proceeding.

This device can support 4 users. The shared users can add the device by scanning the shared QR Code provided by the Administrator (owner of device).

- Setp 1: Choose the device you want to share.
- Setp 2: Click "Setting", choose share device.
- Setp 3: Click "Add Sharing"

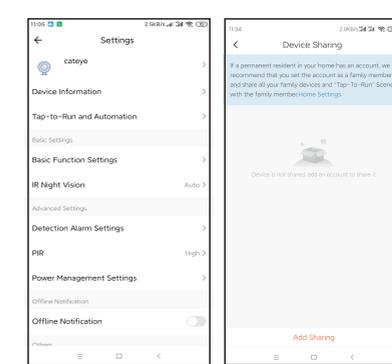


- Setp 4: Enter the account you want to share in the account field.
- Setp 5: When the input is complete, click "Done" in the upper right corner. Complete sharing!

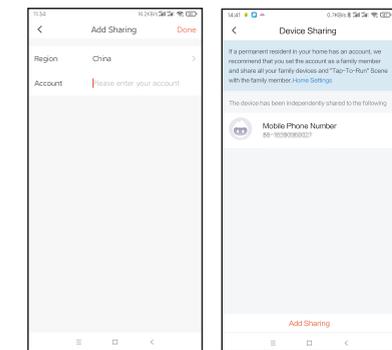

MOUNTING WALL INSTALLATION

Kind tips:
1. Do not pull the cable too hard during installation
2. The cable contains data transmission, please do not fold it

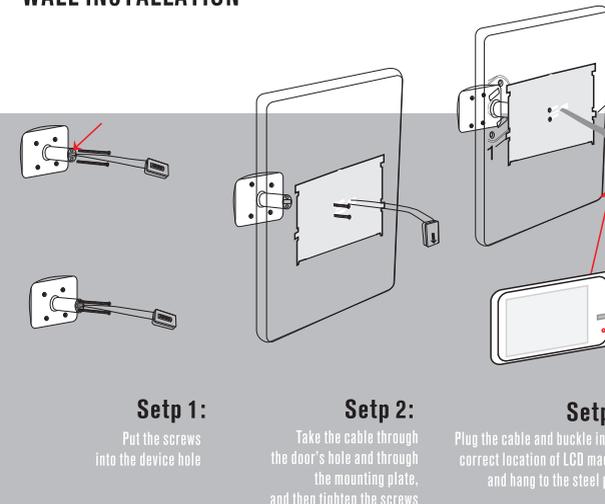


TROUBLE SHOOTING

WONT TURN ON:
Please ensure that the device is properly charged.

DEVICE WONT TURN ON AFTER INITIAL USE:
If you remove the device from the mounting plate while the Tamper Alarm function is turned on, you may disable the device. Simply put it back on the mounting plate and press the doorbell button. GO to the app settings to turn off the Tamper Alarm.

DEVICE WONT TURN ON AFTER INITIAL USE:
If prompted with "The Connection Failed, Please Check The Wi-Fi Configuration is Correct" when ringing the doorbell after the device has been successfully configured, there may be too many barriers (typically walls) between your Wi-Fi router and the device which has weakened the signal.

PARTS & SPECS

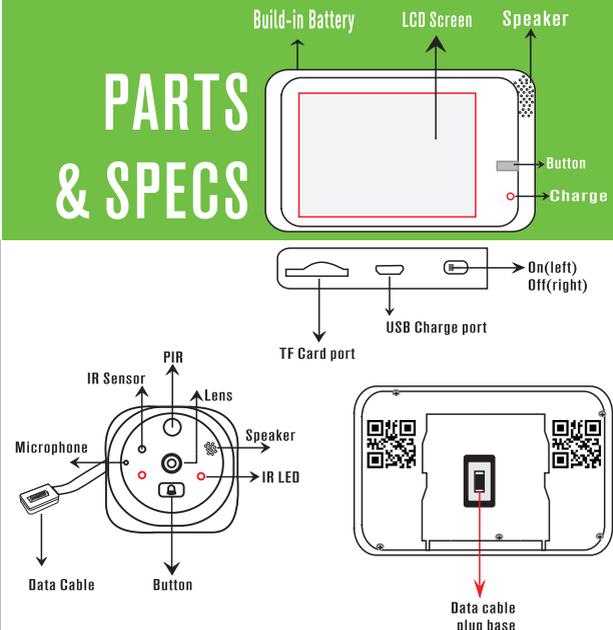

SPECIFICATION:

MATERIAL: Aluminum Alloy
LCD SIZE: 4.3 Inch
DISPLAY RESOLUTION: 1080P
BY PHONE: Android, iOS
ANGLE OF VIEW: 120°
MOTION DETECTION: Support PIR
WI-FI MODE: 802.11 b/g/n
INPUT/OUTPUT: Built-in microphone, two-way audio
NIGHT VISIBILITY: with IR led, Night vision up 1-3 meters
STORAGE: Cloud storage and TF Card (128G Max.)
BATTERY: 5000mAh battery, charged by USB (5V, 1A)
USER ACCOUNTS: Total 4 Users (Admin user and shared user)
CERTIFICATION: CE, FCC, RoHS