


Product specification

Schematic diagram of product structure

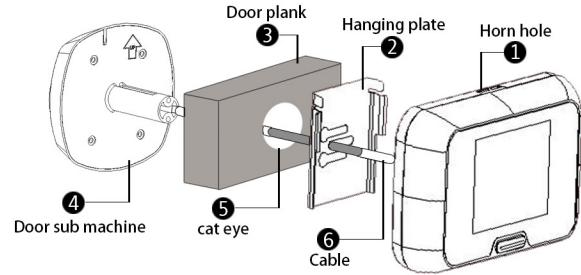


inventory




In door host	Gate hole
Hanging plate	Screw
After sales service card	Product specification/Certificate

Appearance function sketch map

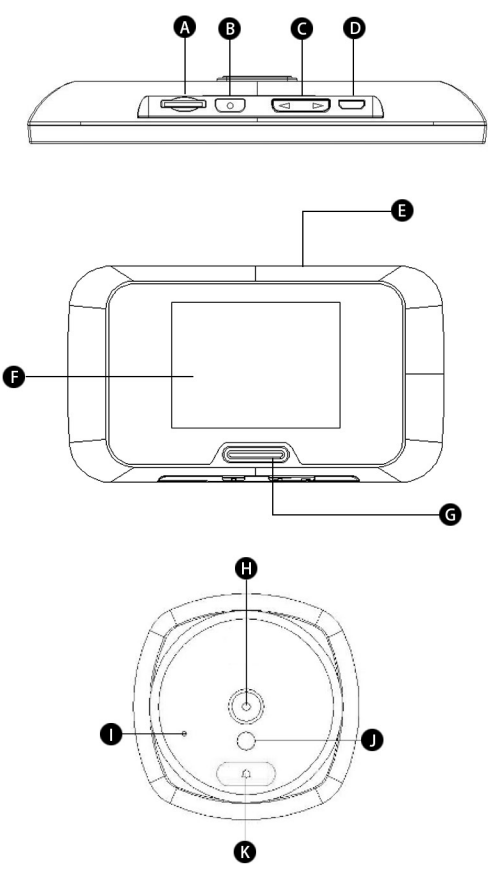

A: TF Card slot.
B: Menu key (Press the "menu" button to enter the main menu interface in the case of opening the camera.)
C: Left/Right (Menu to the left or up select key/Menu to the right or down key.)
D: USB (Read data and power supply.)
E: Horn hole
F: Display
G: switch/Photograph (Press the button and press 3S to shutdown in standby condition, press the key to open the camera, inside look outside, watching the interface, then take pictures or video to press the switch button once in the menu and press the switch button again to return to the main interface.)
H: Camera
I: Microphone
J: Infrared lamp


installation diagram

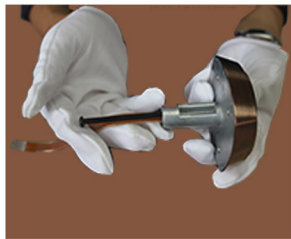

01Select the appropriate thickness of the screw, screw into the child.
(In the process of operation, please be careful not to damage the cable)




02The cable through the doorway at the door.
(If the door is very thick, can roll a small paper tube through the cable will Sent to the portal.)

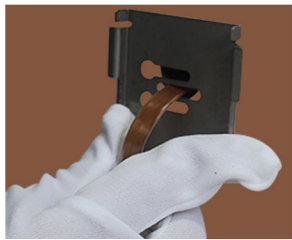

03The door will plug through the cable hanging plate.
(In the process of operation do not pull the cable.)



04Figure out again after the cable; the screw through the hanging plate.

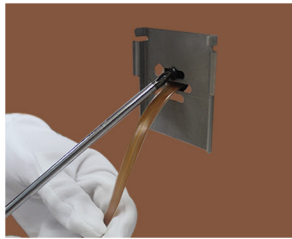

05Tighten the screw; fix the plate.
(Note: please be careful to prevent scratches cable, due to personal operation Improper, cause damage to cable no longer warranty.)



06Fixed the door outside the machine.
(Machine with foam adhesive, please be careful. Tear off the paper and put the child to the door.)




07The cable plug mouth line slot.
(Please note that the direction of the plug is not in use.)



08The cable will straighten out; then the host North alignment of the hanging grooveBayonet plate.

Menu option

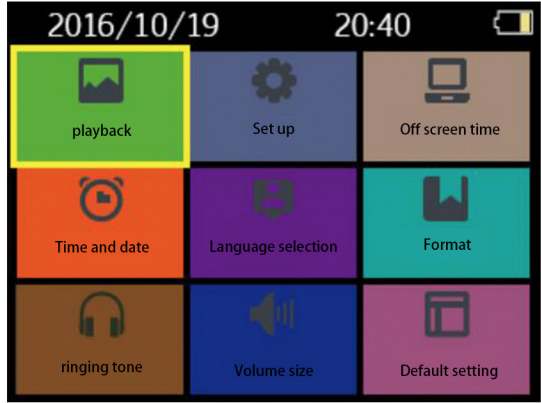

Playback: view photos and video files
Setting: 1, working mode
2, avoid disturbing mode
3, the screen refresh rate
4, contrast settings
5, software version
Turn off time: automatic shutdown 10S\20S\30S
Date time: press the up and down key settings, press the menu to confirm, set the menu key to return to the viewing interface
Language selection: English and Chinese
Formatting: note that this operation will delete all files in the memory card.
Tone selection: 36 chord tones for selection
Volume size: high, medium and low three adjustable
Default settings: select OK to restore factory settings

Major security matters
1 do not place the product in high temperature, high humidity, or a large amount of dust, salt fog and other harsh environment. Also, do not expose to rain. Otherwise, it may cause damage to the machine.
2 do not squeeze the door outside the machine lens, otherwise the return of hardware damage.
3 during the installation process, must be carefully made, not pull machine cable, also want to Prevent data lines from scratching or tearing. (due to improper operation, resulting in cable damage is not within the scope of warranty.)
This product is suitable for door thickness
Use range of gate hole: 50mm - 14mm
Door thickness range: 95mm - 45mm
When selecting a screw to install the door, be sure to confirm the doorThickness, select the corresponding screw according to the thickness of the door.

Note:
When the thickness in the range 45mm60mm, choose 35mm screws;
When the door is in the range of 60mm75mm thick, with 50mm screws;
When the door is in the range of 75mm95mm thick, with 70mm screws.